

CL Type VAT fasteners

INSTALLATION INSTRUCTIONS

Insert fastener onto belt head with separate-plate side above and continuous side under.

Place head onto an iron profile and gently hammer fastener flat, so that it perfectly adheres to belt. Do not alter hole alignment. (Fig. 1)

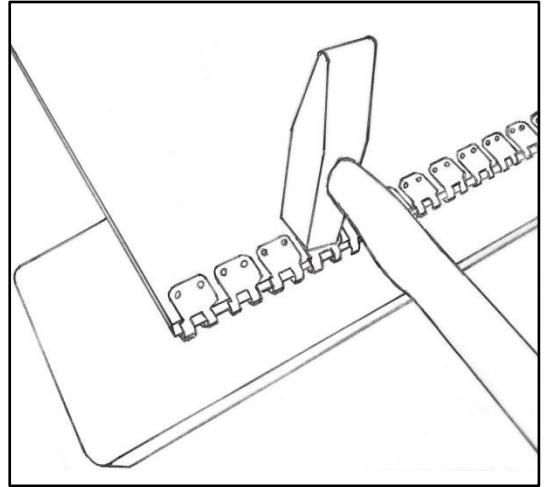


Fig. 1

Place belt onto an adequately thick penetrable support.

Check belt is butt up against fastener stops and hammer a nail in the middle, and two at the two ends. Then, hammer all the other nails. (Fig. 2)

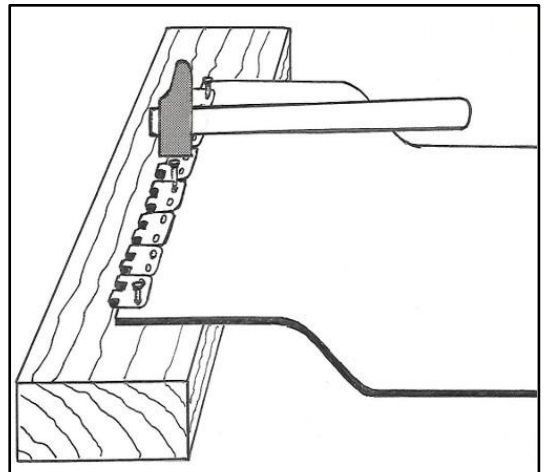


Fig. 2

Use a screwdriver to detach belt from support, turn it over, and place it onto an iron bar, with nail heads under and ends above. (Fig. 3)

Use pliers to cut off ends, allowing them to protrude enough to model the second head.

Hammer all ends to model second nail head keeping protrusion to a minimum.

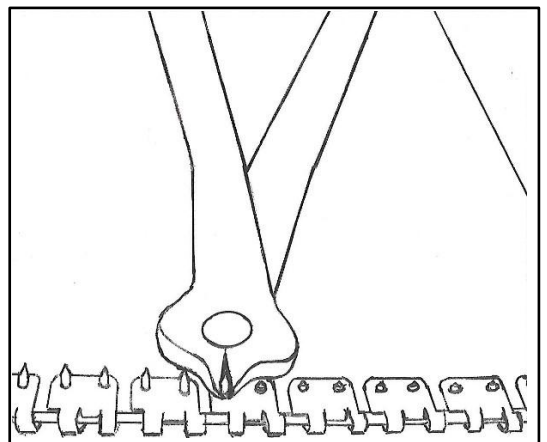


Fig. 3



V.A.T. SRL

Conveyor belt fasteners