


NY Type VAT fasteners

INSTALLATION INSTRUCTIONS

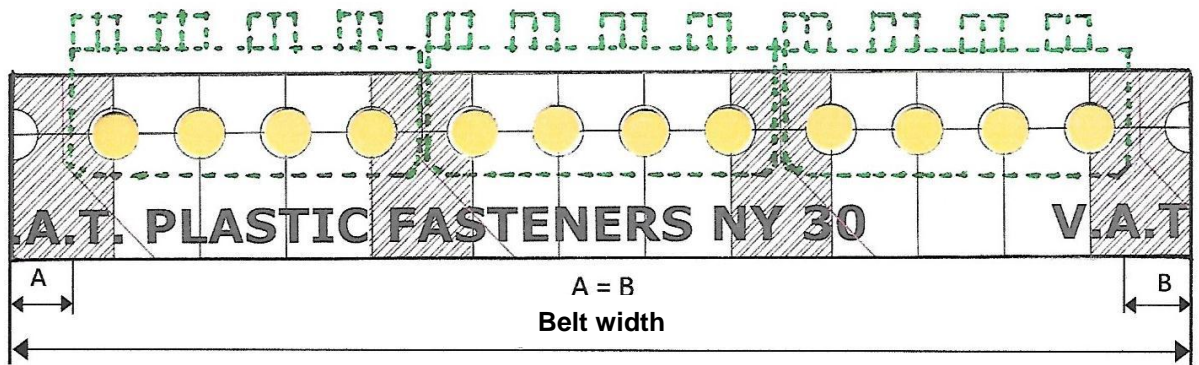

Cut belt 11 mm shorter than desired length.

Apply adhesive strip, as shown in picture, onto belt rough or coarse surface; on PU belt coat in PVC-coated belts.

Place belt onto a polyethylene surface and pierce with a 6.5 - 7 mm diameter die-cutter.

Insert fastener female part into belt lower side, and male part into cover side.

Firmly press with thumb to interlock the two parts.

Should perfect lock not be achieved, bang into position with a mallet.

Once installed, join heads by inserting the nylon connecting rod.

Heat ends with a welder to secure them, creating two stops to keep them in position.



V.A.T. SRL

Conveyor belt fasteners